

JEPPESEN

5 MAR 04

19-1

EFERDING

EFERDING

AUSTRIA

LOLE

Elev **887'** / 270 m

N48 20.3


E013 59.2

2.2 NM NW Eferding

(AFIS) MAX 25 NM/3000' SFC.

EFERDING FLUGPLATZ **122.40**

RWY	ILS	RWY	ILS

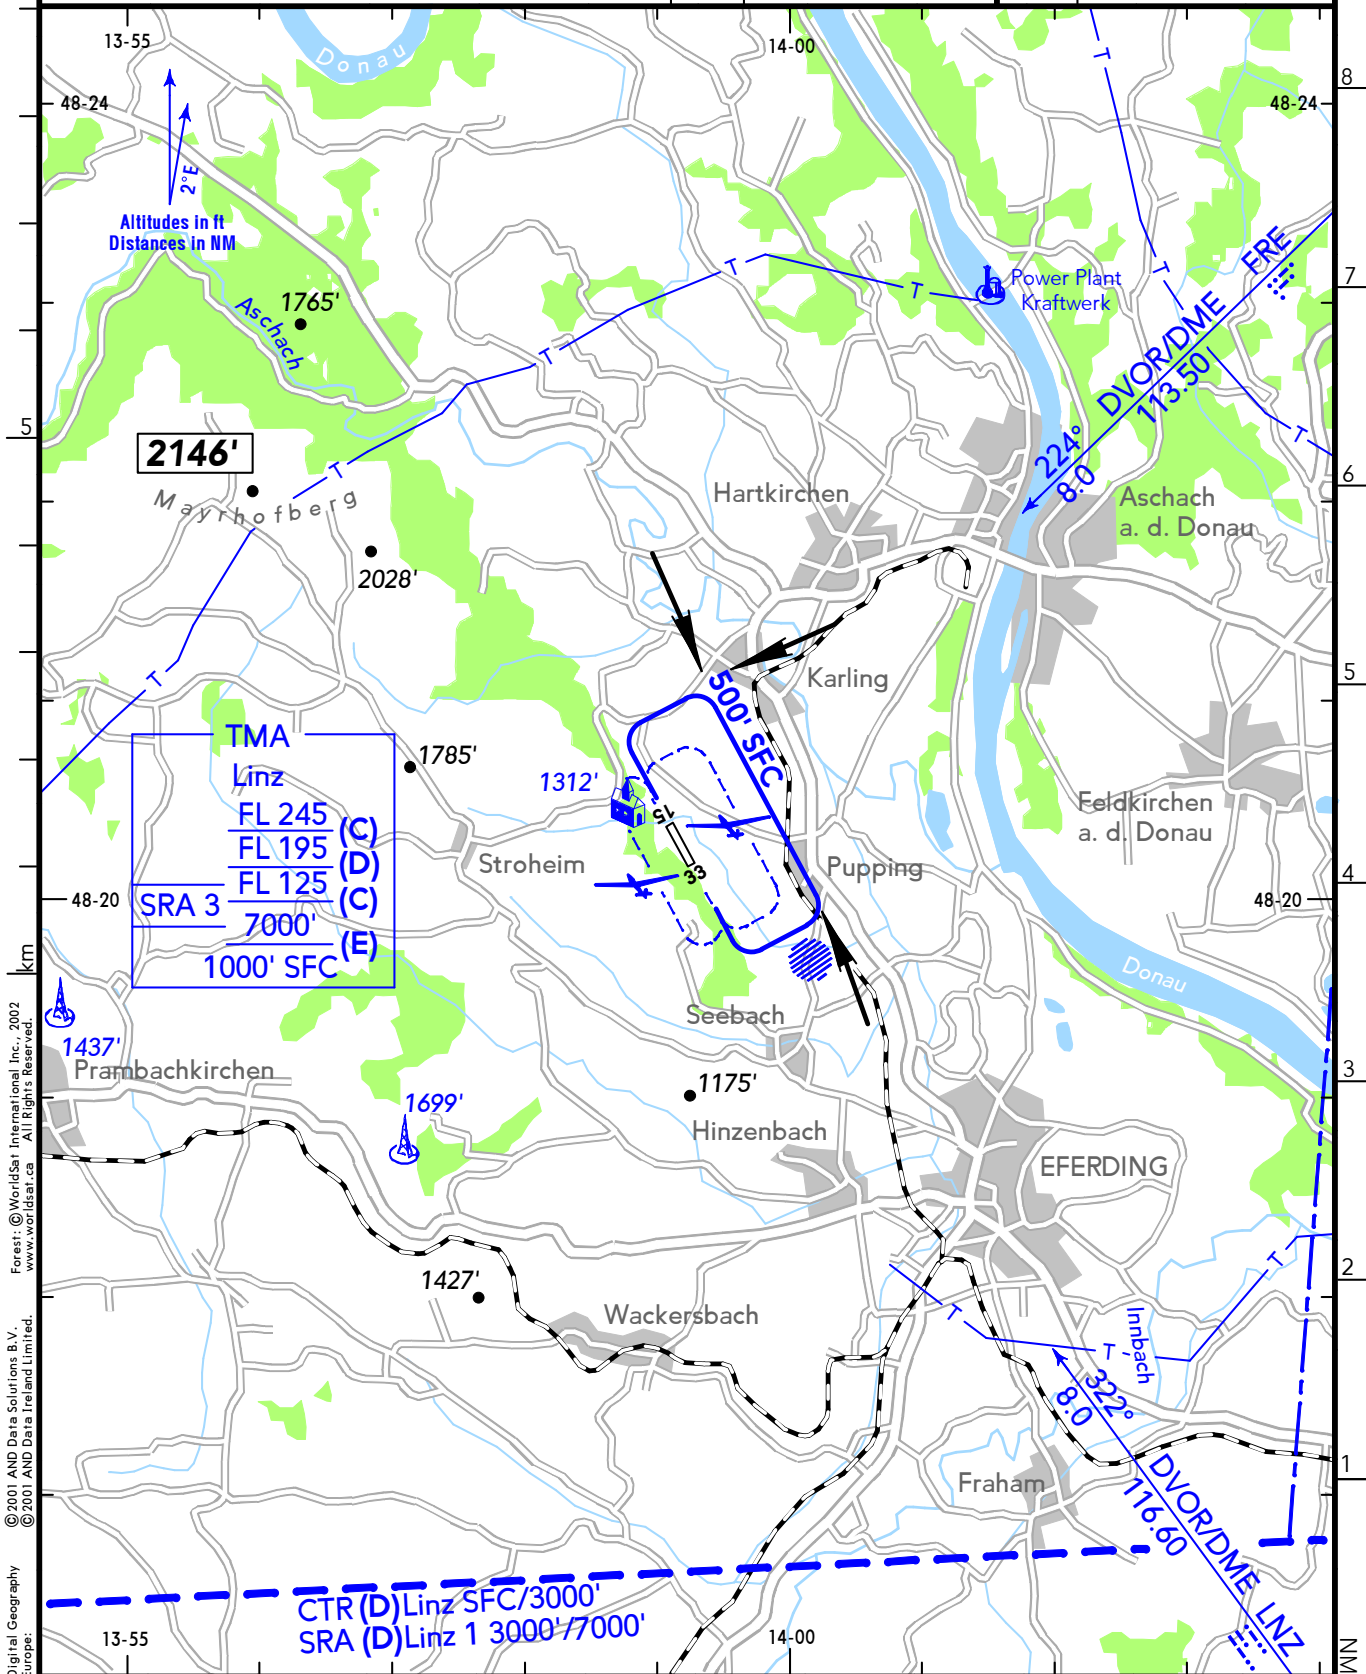

Digital Geography Europe: © 2001 AND Data Solutions B.V. © 2001 AND Data Ireland Limited. Forest: © WorldSat International Inc. 2002 www.worldsat.ca All Rights Reserved.

CHANGES: New layout.


© JEPPESEN, 2004. ALL RIGHTS RESERVED.
 BOTTLANG AIRFIELD MANUAL

EFERDING

19-2 5 MAR 04




EFERDING



AUSTRIA

(FIS)

WIEN INFORMATION **124.40**

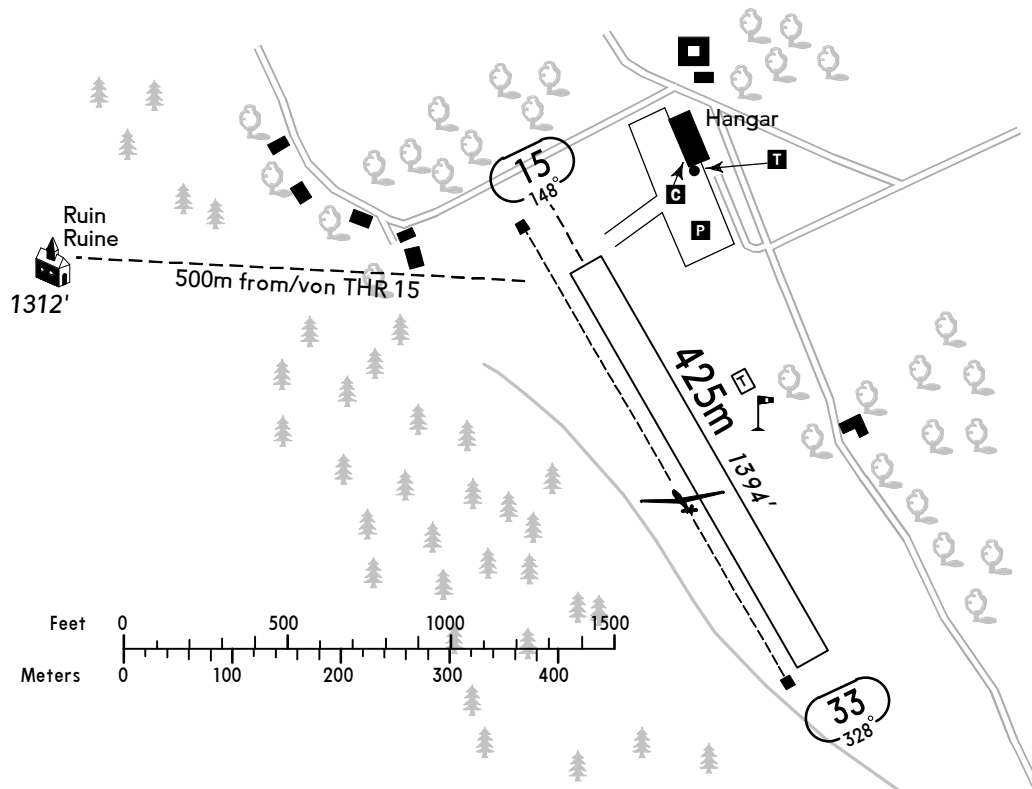

RWY No	Dimension (m) - Surface	TORA (m)	LDA (m)	Strength	Lights
15 33	425 x 30 Grass	400	400	2t AUW	—

See also LINZ 19-1/19-2

Siehe auch LINZ 19-1/19-2

AD PPR.

Flugplatz PPR.

Contact EFERDING FLUGPLATZ at least 5 MIN prior to reaching the airfield.

EFERDING FLUGPLATZ spätestens 5 MIN vor Erreichen des Platzes rufen.

Within AD traffic listening watch shall be maintained.

Im Flugplatzverkehr ist ständige Hörbereitschaft aufrechtzuerhalten.

Taxi on RWY only, enter/leave RWY at THR 15.

Rollen nur auf der Piste, an THR 15 die Piste verlassen, bzw. auf die Piste rollen.

Look out for gliders.

Auf Segelflüge achten.

500m west RWY mountain with ruin 1312'.

500m westlich der Piste Bergrücken mit Ruine 1312'.

Avoid built-up areas near airfield, especially senior citizens home 0.8 NM SE airfield.

Wohngebiete in Platznähe meiden, insbesondere Seniorenheim 0.8 NM südöstlich des Platzes.